



Spindle or Oversized Bracket

ASSEMBLY INSTRUCTIONS

Will fit large posts up to 6 3/8" in thickness

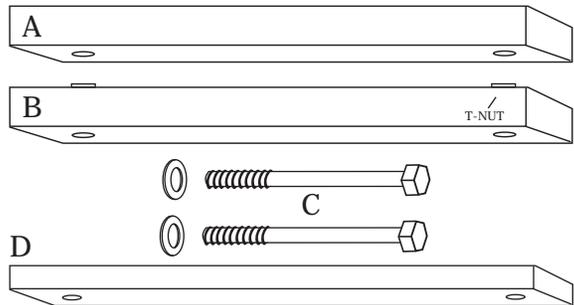

This wood clamp provides a means for attaching your gate to a large post or spindles without damaging the post with screws. Please follow these procedures to install a CARDINAL GATE.

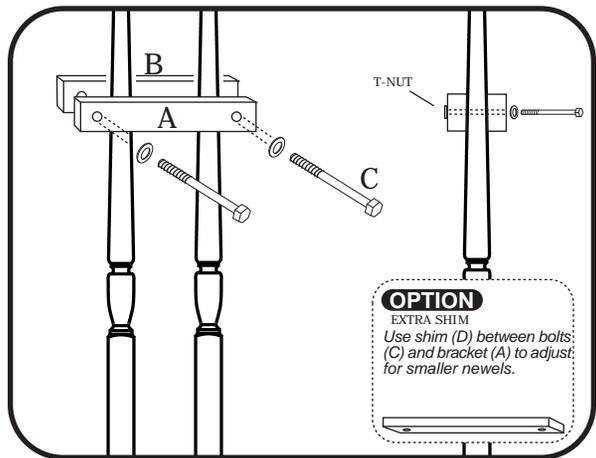

Insert bolt with washer through clamp and screw into T-nut on opposite clamp. The clamp with the T-nut should be on the outside of the post. Mount gate according to instructions. Use shim if necessary to ensure level gate installation.

It may be necessary to obtain longer or shorter bolts from a hardware store, depending on post thickness.


It may be desirable to use a short piece of duct tape or weather strip between clamp and post to protect finish. CARDINAL GATES, INC. will not be responsible for any damage to the finish of a post.

CARDINAL GATES, INC.
79 Amlajack Way • Newnan, GA 30265
770-252-4200 • www.cardinalgates.com


Spindle or Oversized Bracket

ASSEMBLY INSTRUCTIONS

Will fit large posts up to 6 3/8" in thickness

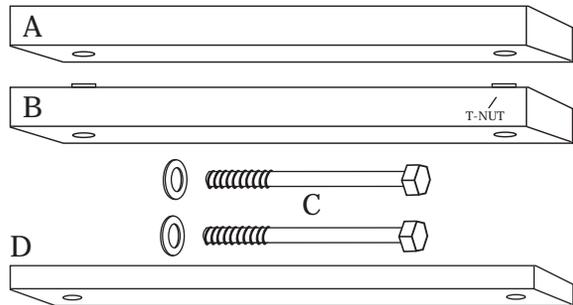

This wood clamp provides a means for attaching your gate to a large post or spindles without damaging the post with screws. Please follow these procedures to install a CARDINAL GATE.

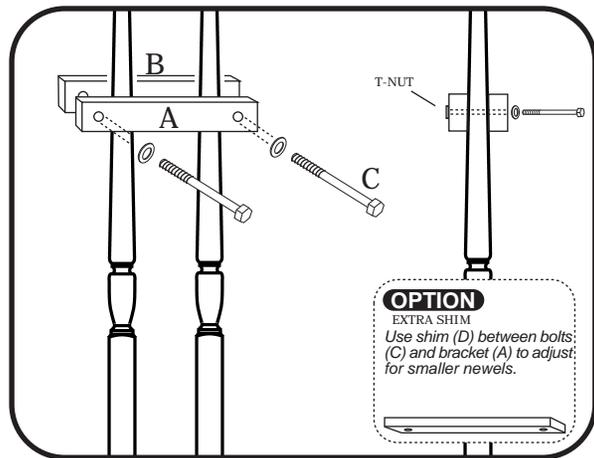

Insert bolt with washer through clamp and screw into T-nut on opposite clamp. The clamp with the T-nut should be on the outside of the post. Mount gate according to instructions. Use shim if necessary to ensure level gate installation.

It may be necessary to obtain longer or shorter bolts from a hardware store, depending on post thickness.


It may be desirable to use a short piece of duct tape or weather strip between clamp and post to protect finish. CARDINAL GATES, INC. will not be responsible for any damage to the finish of a post.

CARDINAL GATES, INC.
79 Amlajack Way • Newnan, GA 30265
770-252-4200 • www.cardinalgates.com


Spindle or Oversized Bracket

ASSEMBLY INSTRUCTIONS

Will fit large posts up to 6 3/8" in thickness

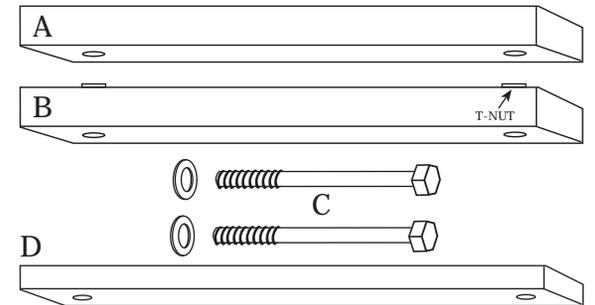

This wood clamp provides a means for attaching your gate to a large post or spindles without damaging the post with screws. Please follow these procedures to install a CARDINAL GATE.

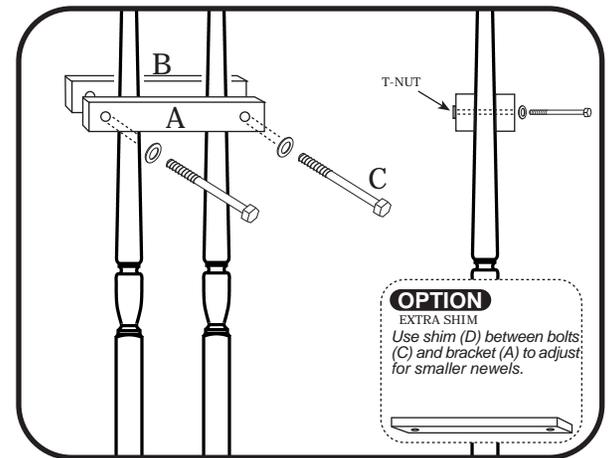

Insert bolt with washer through clamp and screw into T-nut on opposite clamp. The clamp with the T-nut should be on the outside of the post. Mount gate according to instructions. Use shim if necessary to ensure level gate installation.

It may be necessary to obtain longer or shorter bolts from a hardware store, depending on post thickness.

It may be desirable to use a short piece of duct tape or weather strip between clamp and post to protect finish. CARDINAL GATES, INC. will not be responsible for any damage to the finish of a post.

CARDINAL GATES, INC.
79 Amlajack Way • Newnan, GA 30265
770-252-4200 • www.cardinalgates.com