

Installation Instructions: WINDOW WARDEN™ Window Guards

Note: The **WINDOW WARDEN™ Window Guard Kit** is shown in Fig. 1 and may be mounted on either the left or right side of the window opening.

For most window installations, you may discard the Stop Button (C) and mount your **WINDOW WARDEN™ Window Guard** inside the window track to align with the lower window frame as in Fig. 2. **For other installations** use the Stop Button (C) secured to the upper edge of the lower window frame with supplied screw (D) and mount your **WINDOW WARDEN™ Window Guard** on the window casement to align with the Stop Button as shown in Fig. 3.

1. Open the window to just under 4-inches (102 mm). Check the opening size using a tape measure or the gauge below. * *This position must prohibit the free passage of a 4-in (102-mm) rigid sphere through the window opening for 2009 International Residential Code, Section R612 compliancy. Always check your local building codes.*
2. Place the lower edge of the Stop Flag (B) on the window frame as in Fig. 2 (or Stop Button Fig 3.). Fasten the bracket in place with a screw (D) in the top hole. Close the window and secure the bracket with a second screw.
3. Mount the optional Storage Bracket where desired. The Stop Flag may be placed in the Storage Bracket when not in use.
4. To remove the Stop Flag, slide back drive pin to disengage from bracket, press down and it will pop off. To install, reverse procedure and align Stop Flag Pins to Bracket Holes, push to compress spring, and then slide up into bracket. Push Lock Pin in to secure.

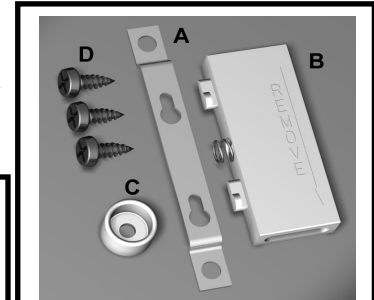


Fig. 1


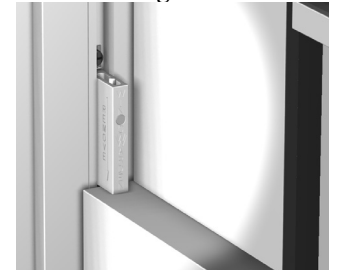



Fig. 2




Fig. 3

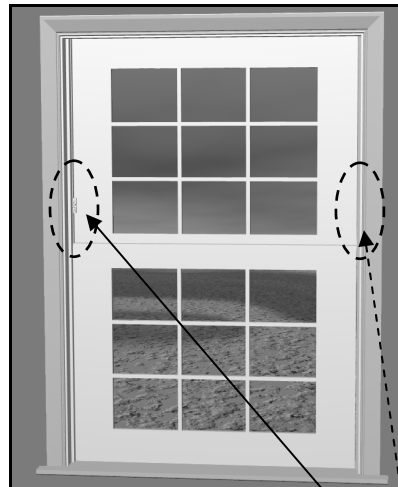


Mount left or right side

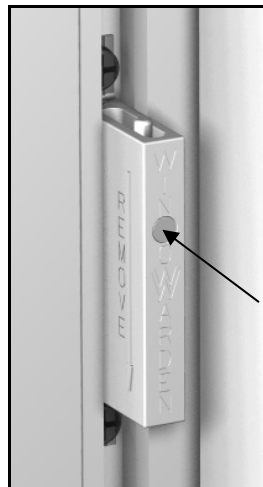

Lock Pin pushed in

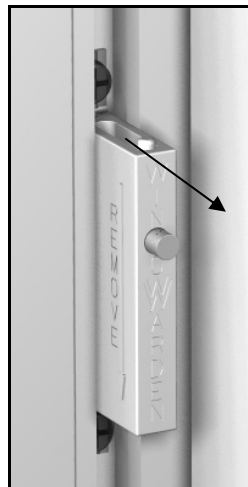

Drive Pin pulled back

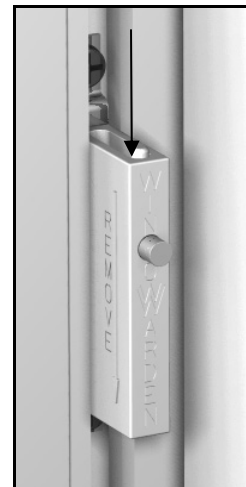

Stop Flag Pushed Down



Stop Flag Popped-Off

